

CABIN AIR FILTER IDENTIFICATION / INSTALLATION


IMPORTS

AF1238 / AFC1238


Acura RL




- OE:** 79371-SZ3-A01
Fits: 1996-2004 Acura RL
Size: 7 27/32 x 4 29/32 x 3/4
(199.2 x 124.6 x 19.1)
A.Gskt.: [2] Attached to Each Filter
Note: 2 Required per Vehicle (Sold as Set of 2)

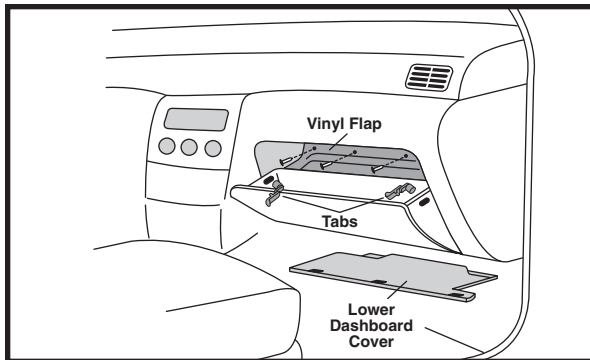


1. Open passenger side door.
2. Unclip and remove lower dashboard cover located under glove compartment.
3. Open glove compartment.
4. Remove tabs on left and right sides of glove compartment to release glove compartment.
5. Remove screws from vinyl flap behind glove compartment.

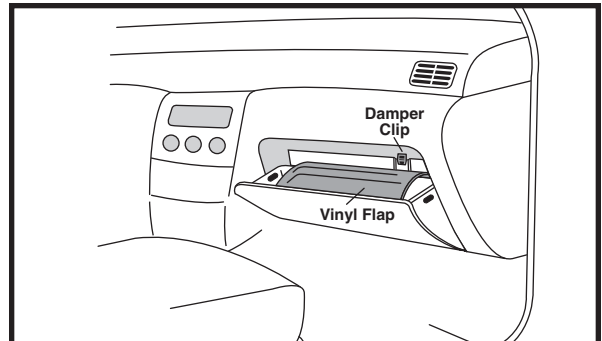

6. Pull vinyl flap forward.
7. Detach damper clip and remove glove compartment. (Disconnect trunk opener switch connector.)

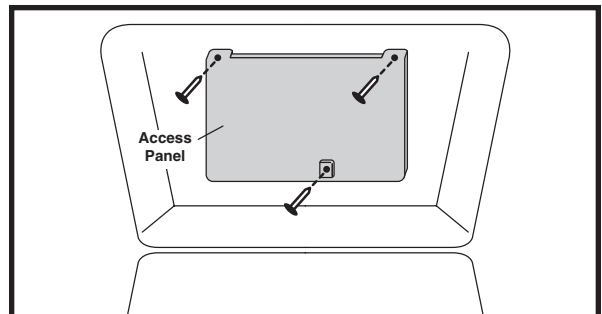

8. Remove screws on access panel.
9. Remove access panel.

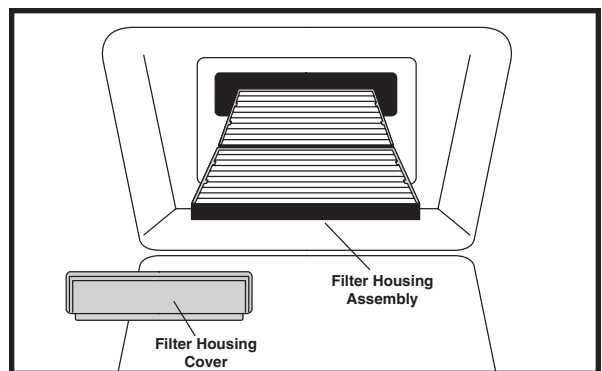

10. Remove filter housing cover.
11. Turn the ignition switch to ON and set the recirculation control switch on RECIRCULATE.
12. Remove filter housing assembly.
13. Remove filters from filter housing assembly.
14. Replace filters and reassemble.

Notice: The information provided is based on the latest authoritative information available at press time. However, due to manufacturers' changes, and year and model variations, Hastings Premium Filters cannot be responsible for misapplications and instruction errors.



4400 East Highway 30 ■ P.O. Box 6006
Kearney, NE 68848-6006
PH: 800-887-8836 ■ FAX: 800-210-6906
Internet: www.hastingsfilter.com