

# CABIN AIR FILTER

## IDENTIFICATION / INSTALLATION

# FORD

# AFC1067

**Ford Freestar, Windstar;  
Mercury Monterey**




**OE:** XF2Z-19N619-AB


**Fits:** 2004-07 Ford Freestar, Mercury Monterey  
1999-2003 Ford Windstar

**Size:** 11 13/32 x 5 3/16 x 31/32  
(289.7 x 131.8 x 24.6)

**A.Gskt.:** [1] Attached

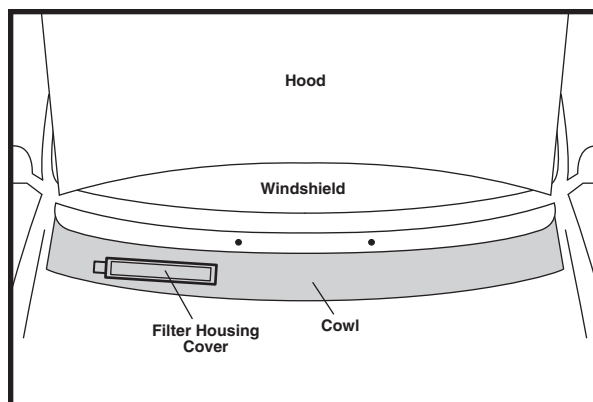

1. Open hood.
2. Unsnap and remove filter housing cover on passenger side of cowl.

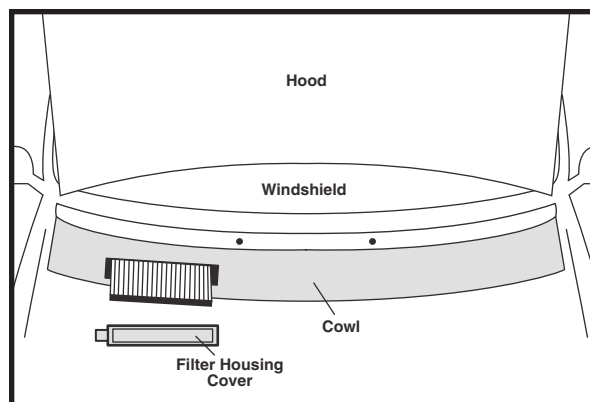

3. Replace filter and reassemble.

**Notice:** The information provided is based on the latest authoritative information available at press time. However, due to manufacturers' changes, and year and model variations, Hastings Premium Filters cannot be responsible for misapplications and instruction errors.



4400 East Highway 30 ■ P.O. Box 6006  
Kearney, NE 68848-6006  
PH: 800-887-8836 ■ FAX: 800-210-6906  
Internet: [www.hastingsfilter.com](http://www.hastingsfilter.com)