

CABIN AIR FILTER

IDENTIFICATION / INSTALLATION


IMPORTS

AF1241 / AFC1241


Nissan Frontier, Xterra




- OE:** B7200-3S500
Fits: 2000-04 Nissan Frontier, Xterra
Size: 9 1/8 x 8 9/32 x 15/16
(231.8 x 210.3 x 23.8)
A. Gskt.: [1] Attached to Each Filter
Note: Clip Included
2 Required per Vehicle (Sold as Set of 2)

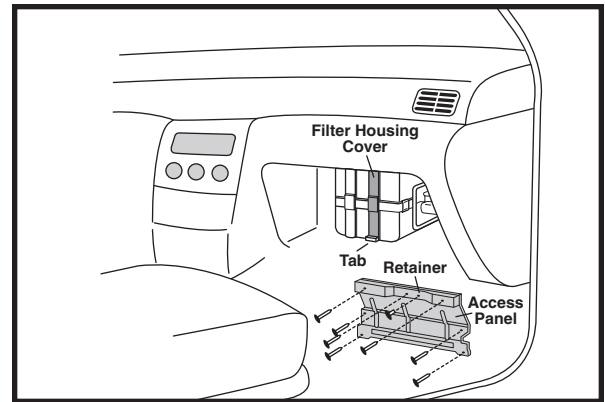

5. Remove screws and retainer.
6. Remove access panel.
7. Cut out plastic filter housing cover above the tab with a utility knife (if installing for the first time).

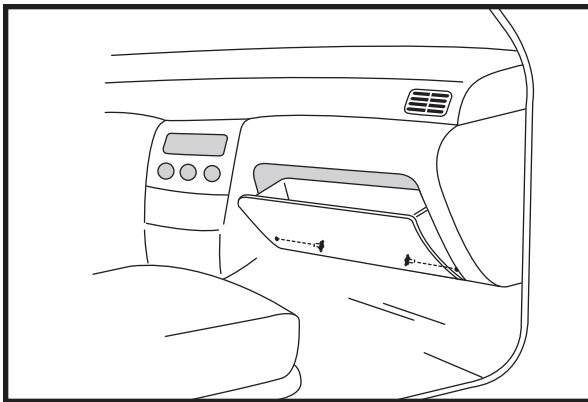

1. Open passenger side door.
2. Open glove compartment.
3. Remove pivot pins.
4. Remove glove compartment.

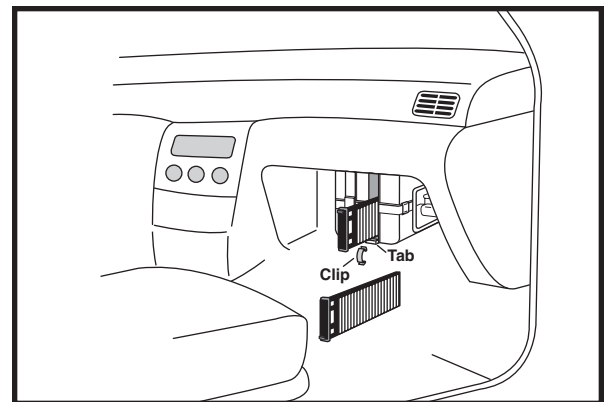

8. Remove clip on tab.
9. Remove first filter.
10. Slide second filter down and then out.
11. Replace filters in reverse order and reassemble.

Notice: The information provided is based on the latest authoritative information available at press time. However, due to manufacturers' changes, and year and model variations, Hastings Premium Filters cannot be responsible for misapplications and instruction errors.



4400 East Highway 30 ■ P.O. Box 6006
Kearney, NE 68848-6006
PH: 800-887-8836 ■ FAX: 800-210-6906
Internet: www.hastingsfilter.com