

CABIN AIR FILTER

IDENTIFICATION / INSTALLATION


IMPORTS

AFC1294


**Volkswagen SportVan;
Volvo C30, C70, S40, V50, V50 T5**



OE: 8687389
Fits: 2009 Volkswagen SportVan
2008-10 Volvo C30
2007-10 Volvo C70
2005-10 Volvo S40, V50
2005-07 Volvo V50 T5
Size: 9 1/4 x 8 9/32 x 1 3/8
(235.0 x 210.3 x 34.9)
A. Gskt.: [2] Attached

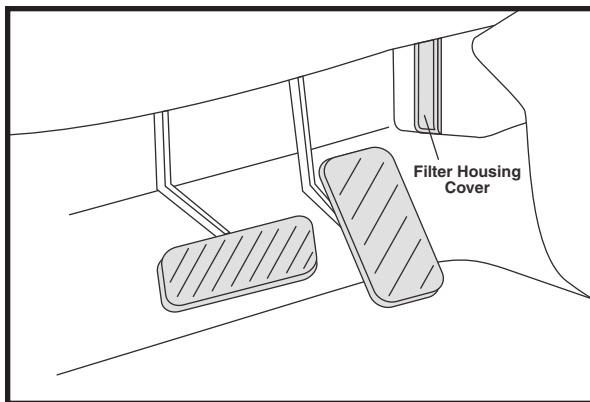

1. Open driver side door.
2. Remove dashboard behind accelerator pedal to expose filter housing cover.
3. Remove filter housing cover.

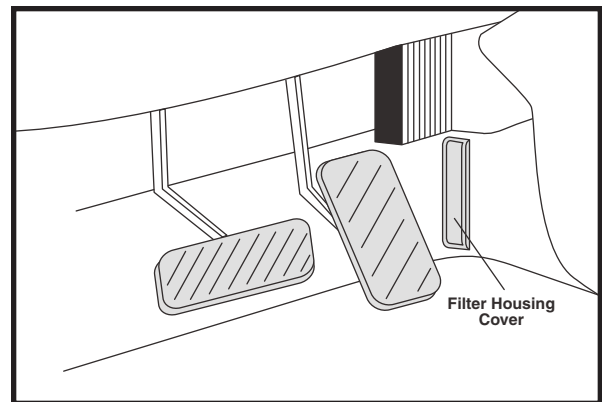

4. Replace filter and reassemble.

Notice: The information provided is based on the latest authoritative information available at press time. However, due to manufacturers' changes, and year and model variations, Hastings Premium Filters cannot be responsible for misapplications and instruction errors.



4400 East Highway 30 ■ P.O. Box 6006
Kearney, NE 68848-6006
PH: 800-887-8836 ■ FAX: 800-210-6906
Internet: www.hastingsfilter.com