

CABIN AIR FILTER

IDENTIFICATION / INSTALLATION

GM

AFC1306

**Chevrolet Aveo, Aveo5;
Pontiac G3, G3 Wave, Wave**




OE: 96435888, 96539649


Fits: 2004-on Chevrolet Aveo
2007-on Chevrolet Aveo5
2009-10 Pontiac G3
2009 Pontiac G3 Wave
2005-08 Pontiac Wave

Size: 9 1/16 x 7 7/8 x 3/4
(230.2 x 200.0 x 19.1)

A. Gskt.: [1] Attached

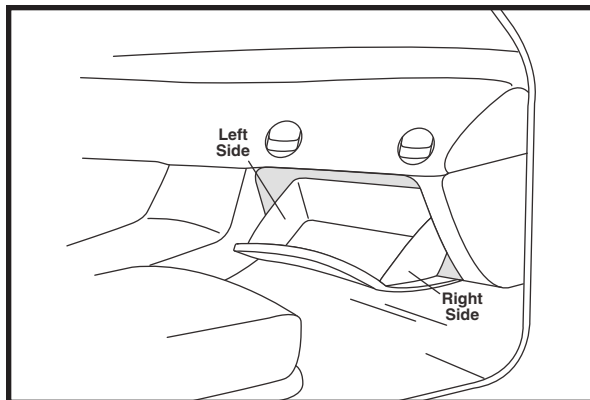

1. Open passenger side door.
2. Open glove compartment.
3. Push in on left and right sides of glove compartment to release glove compartment.

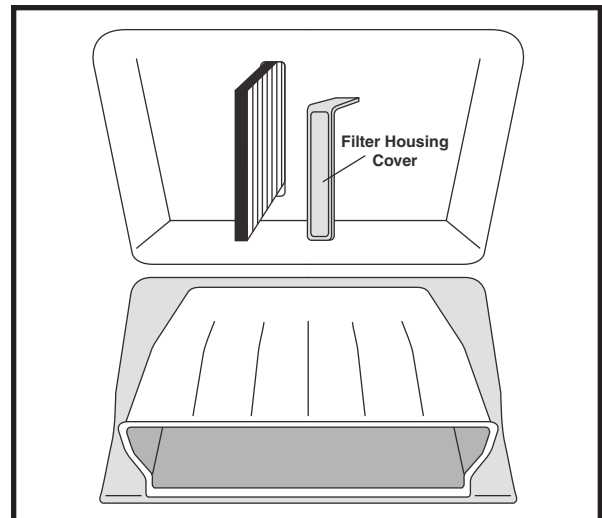

4. Remove glove compartment.
5. Remove filter housing cover.
6. Replace filter and reassemble.

Notice: The information provided is based on the latest authoritative information available at press time. However, due to manufacturers' changes, and year and model variations, Hastings Premium Filters cannot be responsible for misapplications and instruction errors.



4400 East Highway 30 ■ P.O. Box 6006
Kearney, NE 68848-6006
PH: 800-887-8836 ■ FAX: 800-210-6906
Internet: www.hastingsfilter.com