

CABIN AIR FILTER

IDENTIFICATION / INSTALLATION


GM

AFC1359


**Chevrolet Captiva, Captiva Sport, Equinox;
GMC Terrain;
Hyundai Azera, Santa Fe, Santa Fe XL,
Sonata;
Kia Cadenza, Optima, Sedona;
Saturn VUE**




OE: 19130294
Fits: 2010-11 Chevrolet Captiva
2012-on Chevrolet Captiva Sport
2010-on Chevrolet Equinox, GMC Terrain
2013-on Hyundai Azera, Santa Fe
2013 Hyundai Santa Fe XL
2011-on Hyundai Sonata, Kia Optima
2014 Kia Cadenza
2012, 2014 Kia Sedona
2008-10 Saturn VUE
Size: 10 1/16 x 8 3/4 x 11/16
(255.6 x 222.3 x 17.5)

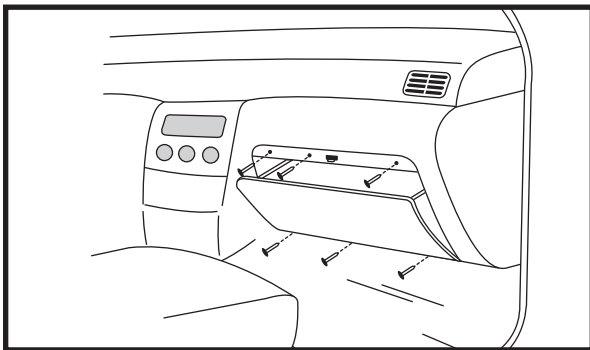

1. Open passenger side door.
2. Open glove compartment.
3. Remove screws on glove compartment.
4. Remove glove compartment.

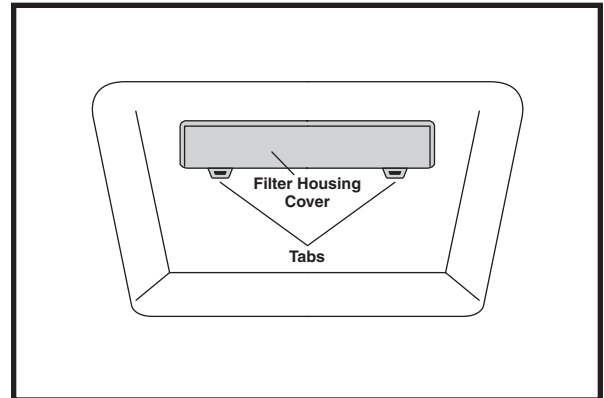

5. Release tabs on bottom of filter housing cover and flip up filter housing cover.

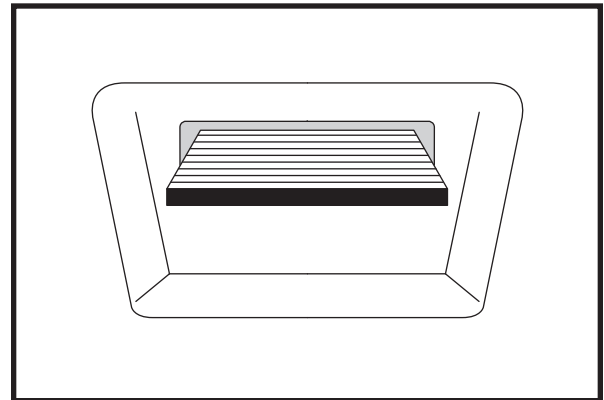

6. Replace filter and reassemble.

Notice: The information provided is based on the latest authoritative information available at press time. However, due to manufacturers' changes, and year and model variations, Hastings Premium Filters cannot be responsible for misapplications and instruction errors.

 **HASTINGS**
PREMIUM FILTERS®
a CLARCOR company

4400 East Highway 30 ■ P.O. Box 6006
Kearney, NE 68848-6006
PH: 800-887-8836 ■ FAX: 800-210-6906
Internet: www.hastingsfilter.com